 



SWINGING BALLET

DESIGN BY COEN MUNSTERS


12910 H6

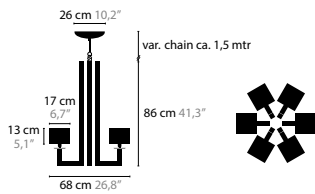

 
12914 H12

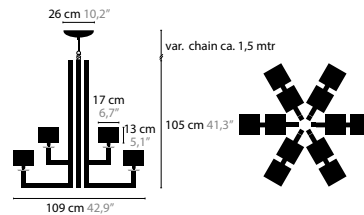


12918 H18

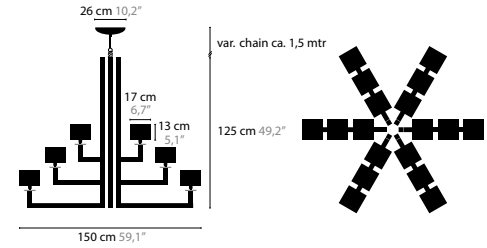 


12980 F1

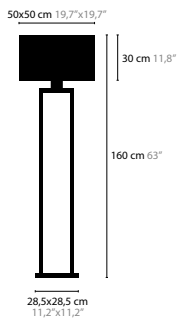 


12970 T1

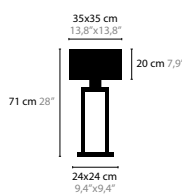 


12972 T1

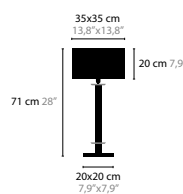 


12950 W1

 

12954 W2

 

12958 W3

 

SWINGING BALLET H6

BASE: 6 X E14 / 220V / MAX. 40W

12910 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET H12

BASE: 12 X E14 / 220V / MAX. 40W

12914 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET H18

BASE: 18 X E14 / 220V / MAX. 40W

12918 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET F1

BASE: 1 X E27 / 220V / MAX. 100W, INCL. REGULAR / DIMMER

12980

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET T1

BASE: 1 X E27 / 220V / MAX. 60W

12970

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET T1

BASE: 1 X E27 / 220V / MAX. 60W

12972 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET W1

BASE: 1 X E14 / 220V / MAX. 40W

12950 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET W2

 
BASE: 2 X E14 / 220V / MAX. 40W

12954 SWAROVSKI® STRASS®


COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SHADE

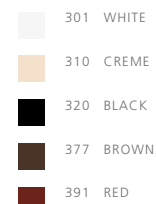


COLOURS

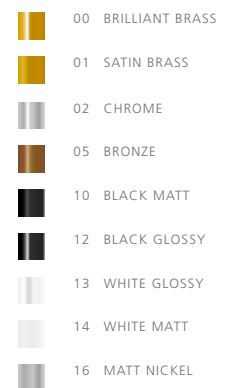 


GENERAL INFORMATION: - CYRSTAL: SWAROVSKI® STRASS®
- MIDDLE BASE ARTICLE 12910, 12914, 12918: OTHER LENGHTS ON REQUEST

OTHER COLOURS ON REQUEST

 
12922 H5

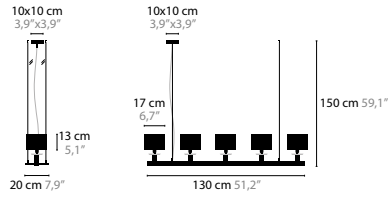


12926 H7

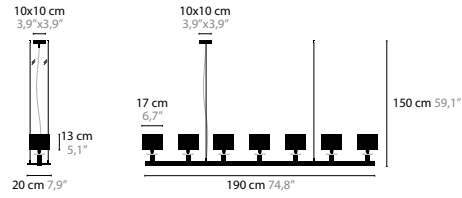 


12930 H10

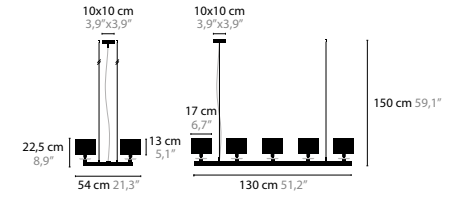 


12934 H14

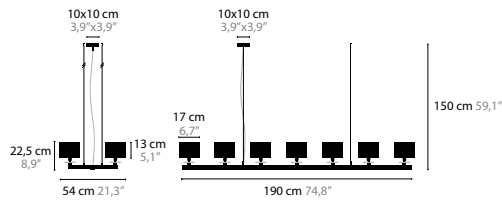 

12938 H17

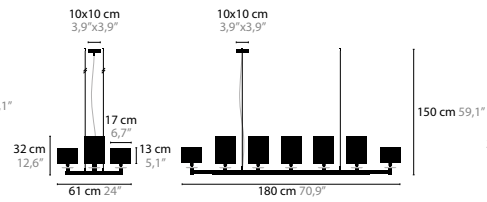 

12942 H23

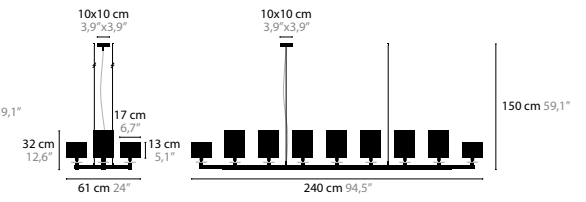 

SWINGING BALLET W3

BASE: 3 X E14 / 220V / MAX. 40W

12958 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET H5

BASE: 5 X E14 / 220V / MAX. 40W

12922 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET H7

BASE: 7 X E14 / 220V / MAX. 40W

12926 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET H10

BASE: 10 X E14 / 220V / MAX. 40W

12930 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET H14

BASE: 14 X E14 / 220V / MAX. 40W

12934 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET H17

BASE: 17 X E14 / 220V / MAX. 40W

12938 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET H23

BASE: 23 X E14 / 220V / MAX. 40W

12942 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

| SHADE | | |
|-------|-----|-------|
| | 301 | WHITE |
| | 310 | CREME |
| | 320 | BLACK |
| | 377 | BROWN |
| | 391 | RED |

| COLOURS | | |
|---------|----|-----------------|
| | 00 | BRILLIANT BRASS |
| | 01 | SATIN BRASS |
| | 02 | CHROME |
| | 05 | BRONZE |
| | 10 | BLACK MATT |
| | 12 | BLACK GLOSSY |
| | 13 | WHITE GLOSSY |
| | 14 | WHITE MATT |
| | 16 | MATT NICKEL |

OTHER COLOURS ON REQUEST