

approx 1.75kg (3.9lb)

- PENDANTS: one
- MOUNTING: shallow white powder coated canopy 116mm (4.5") in diameter x 7mm (0.3") deep
- LAMPING: 1.5w LED or 20w xenon
- CABLE: fixed lengths. 3000mm (10') standard / up to 9900mm (32') maximum
- MATERIALS: blown glass, flexible copper tubing, electrical components, copper hardware, white powder coated canopy
- WEIGHT: approximately 1.3kg (3lb)
- POWER SUPPLIES: remote mounted (fixture does not hook directly to a junction box). Power supplies included

DESCRIPTION

The 28.1c is a single 28 pendant fixture with a shallow white powder coated canopy designed to fit over an existing junction box in which the power supply is installed. The canopy is 116mm (4.5") in diameter and 7mm (0.3") deep, which creates a subtle profile that minimizes the impact in the application surface.

28 is an exploration of specificity in manufacturing. Instead of designing form itself, here the intent was to design a system of making that yields form. Individual 28 pendants result from a complex glass blowing technique whereby air pressure is intermittently introduced into and then removed from a glass matrix which is intermittently heated and then rapidly cooled. The result is a distorted spherical shape with a composed collection of imploded inner shapes, one of which acts as a shade for the light source.

The 28 copper series provides a different compositional reading that results from shaping the copper tubing during installation. Pendants can be angled in any direction to provide a range of sculptural forms. The copper will weather and tarnish, registering the passage of time in its patina.

Standard 28s are made with clear glass exterior spheres and milk white interior lamp holder cavities. 28s are possible with infinite versatility in colour compositions, sizes and shapes.

NOTES


- + Purchase replacement lamps online at www.bocci.com/shop/bulbs
- + Unless otherwise noted when ordering, all fixtures will be outfitted to be xenon compatible
- + Preset lengths may have a variance of +/- 50mm (2")
- + Power supplies must be remote mounted

US Patent # D687,740
EU Patent # 001695834-001 to 004

Made in Vancouver, Canada

Vancouver
sales@bocci.com
www.bocci.com


Berlin
europa@bocci.com
www.bocci.com



SHALLOW CANOPY

28.1c

PRODUCT SPECIFICATION




116 (4.5")


1

Measure and mark the light fixture canopy position on the ceiling

Remote mount


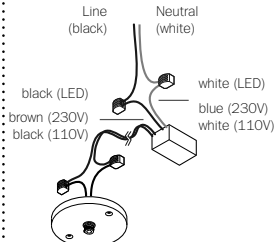


Direct mount

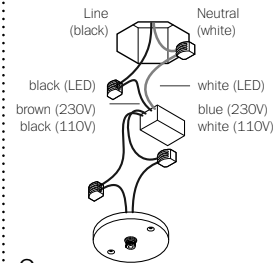



2

Connect transformers inside the canopy to line voltage. Xenon (110V) or LED: connect the black wire to black and white wire to white wire. Xenon (230V): connect black wire to brown wire and white wire to blue wire. For the ground connection, connect the green wire with yellow stripe to the bare copper wire or green wire in the junction box. Note: Bocci recommends mounting transformers remotely in a close, accessible and hidden location for ease of long term maintenance. Installation to be done by certified personnel to ensure compliance with the code.




3

Tuck the transformer and wiring into the junction box, if available. If junction box is not available, use the back plate to enclose the wiring and transformer into the fixture. Mount canopy directly to junction box with fasteners provided or affix directly to structural ceiling surface. Turn power to fixture on.

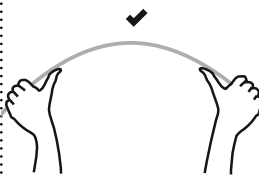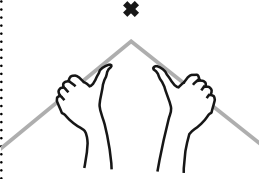


4

Separate the copper tubes according to length. Very carefully uncoil the copper tube with both hands to avoid kinking. Note: be very careful not to overbend the copper tubes as it will leave a permanent kink that can not be removed.

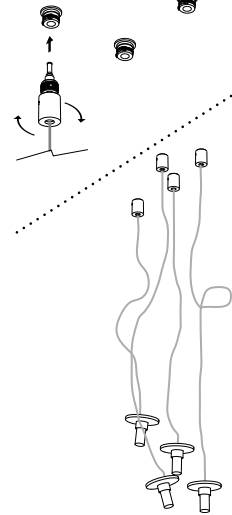


5

Each copper length terminates in a "headphone jack" type connector, which plugs into a receiving receptacle in the canopy. After plugging in each pendant, turn the threaded sheath into place by hand ensuring that it is adequately tightened. Tools are not required. Compose the copper tubing according to the intended design aesthetic. Note: See additional swag instructions if applicable.

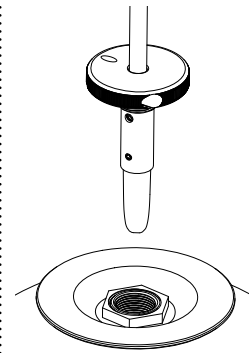

6

Plug the lamp into the socket. Check that each lamp is working properly as you go along by keeping power on. Thread the pendant on. Note: Once the pendant is added, it will pull the copper downwards. The pendant will try to hang directly below the canopy as the copper is not rigid enough for long horizontal compositions without the addition of swag hooks.

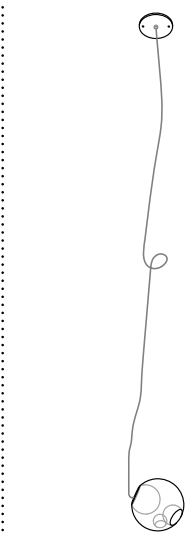

7

Clean fingerprints from surfaces. For additional assistance, please contact Bocci: Vancouver sales@bocci.com www.bocci.com Berlin europe@bocci.com www.bocci.com US Patent # D687,740 EU Patent # 001695834-001 to 004 Made in Vancouver, Canada

